cisco Meraki

MS125 Series Installation Guide

Models

	MS125-24	MS125-24P	MS125-48	MS125-48LP	MS125-48FP
1Gbe RJ45	24	24	48	48	48
10Gbe SFP+	4	4	4	4	4
Dedicated Mgmt Interface	1	1	1	1	1
PoE Capable	No	Yes, 370W	No	Yes, 370W	Yes, 740W
Power Supply	Built-in	Built-in	Built-in	Built-in	Built-in
Fans	No	Built-in	No	Built-in	Built-in

Package contents





In addition to the MS switch, the following are provided:

- US 12-24 mounting screws and cage nuts, 5 of each
- INTL M5 mounting screws and cage nuts, 5 of each


- INTL M6 mounting screws and cage nuts, 5 of each
- Mounting washers

Installation Instructions




Note: Each MS125 comes with an instruction pamphlet within the box. This pamphlet contains detailed step by step guides and images to assist in the physical install of the switch.


1. Install the mounting cage nuts in the rack being used for the switch.

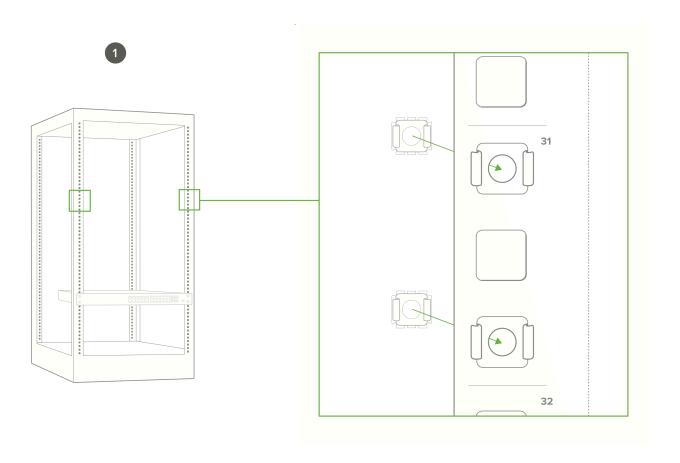

2. Attach the switch face plate to the cage nuts on the rack.

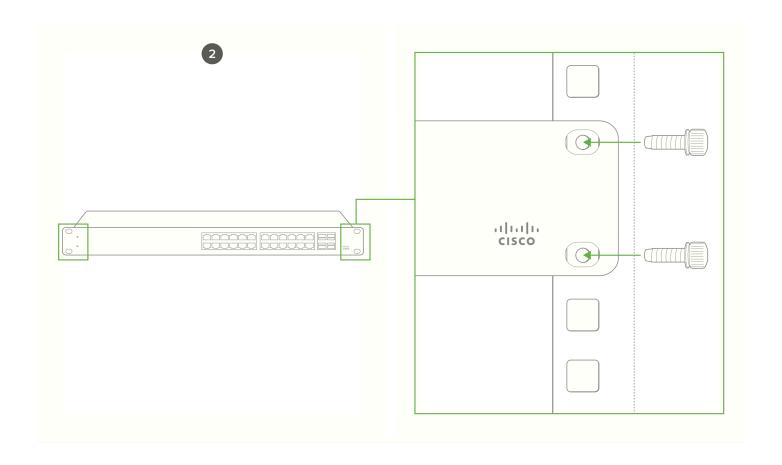


3. Connect power to the power supply unit.

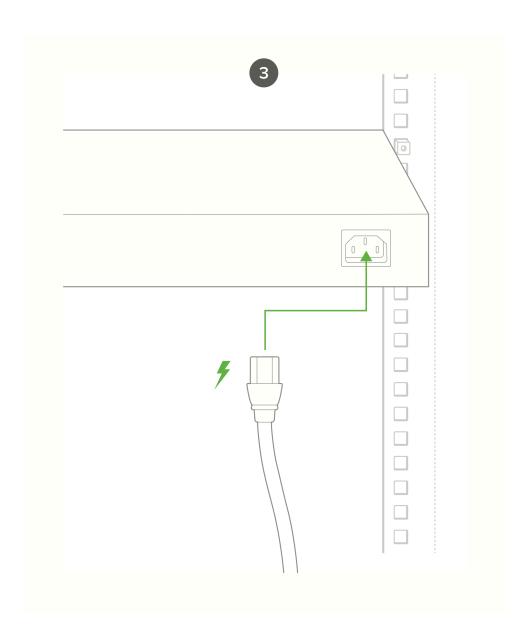


4. (Optional) Install additional SFP+ units as needed, depending on the compatibility of your model.

 
MS125-24 Series front panel




MS125-24P Series front panel

 

MS125-48 Series front panel

 

MS125-48LP/FP Series front panel

 

Ports and Status Indicators

The MS uses LEDs to inform the user of the device's status. When the device powers on, all the Internet LEDs flash twice. Additional functions are described below, from left to right.


Item	Function	LED Status	Meaning	
1	Power	Solid orange	Switch is unable to connect to the Meraki cloud	
		Flashing white	Firmware upgrade in process	
		Solid white	Switch is fully operational and connected to the Meraki cloud	
		Off	Switch does not have power	
2	Restore	N/A	Restore button to clear switch IP and local configuration settings	
3	Switch Ports	Off	No link is detected on this port	
		Flashing orange (RJ45 ports only)	Activity indicator	
		Solid green	1 Gbps link detected	

In addition, there is a RESTORE button available on the front panel.

Insert a paperclip if a restore is required.

- A brief, momentary press: To delete a downloaded configuration and reboot.
- Press and hold for more than 10 sec: To force the unit into a full factory restore.

 MS125 Series back panel



Item Function LED Status	Meaning
--------------------------	---------

Management Interface Green

Connected, used for easy access to the local status page

Power cords may be ordered separately. Power input

Equipment is to be used only in a restricted access location and installed/operated only by trained service personnel.

Mounting hardware

The mounting hardware includes a rack mount kit for standard 1U racks. When installing the device, make sure that there is sufficient space between the rear of the rack and other obstacles to ensure adequate airflow.

Optional Mid-Mount bracket

MS125 48 port models are designed for an optional MA-MNT-MID-1 mid-mount bracket when using 2-post racks.